

41 GOVERNOR

41.1 Disassembly and inspection

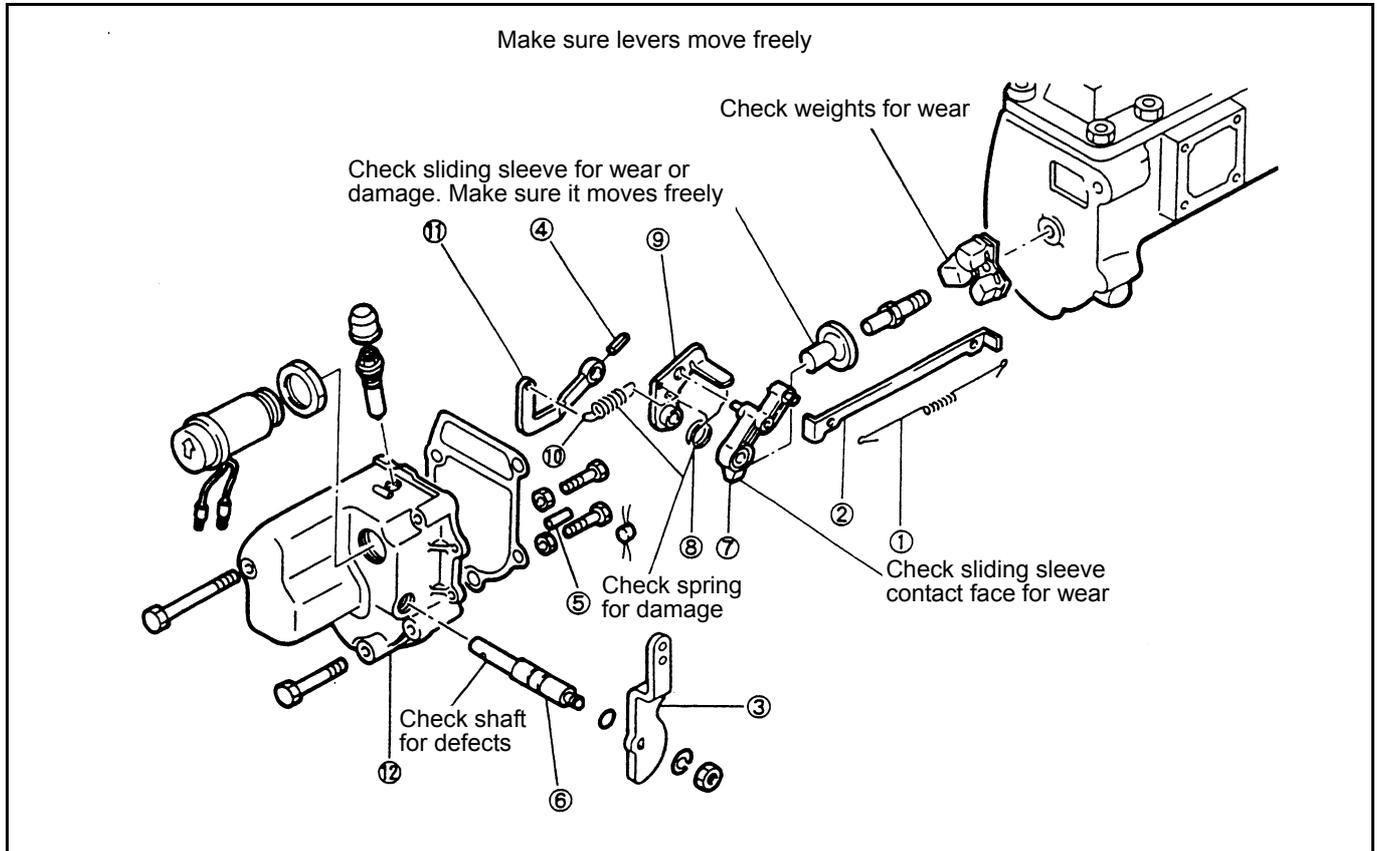


Figure 237 Disassembly sequence and inspection points

Disassembly sequence

1. Tie rod spring
2. Tie rod
3. Speed control lever
4. Spring pin
5. Grooved pin
6. Governor shaft (remove 7 thru 11 as an assembly)
7. Governor lever
8. Start spring
9. Tension lever
10. Governor spring
11. Governor spring lever
12. Governor case