



3'6"
3'7 1/2"
3'
3'2 1/2"
2'10"
2'10"
1'9"
23'9"


STEM FRAME
1-off

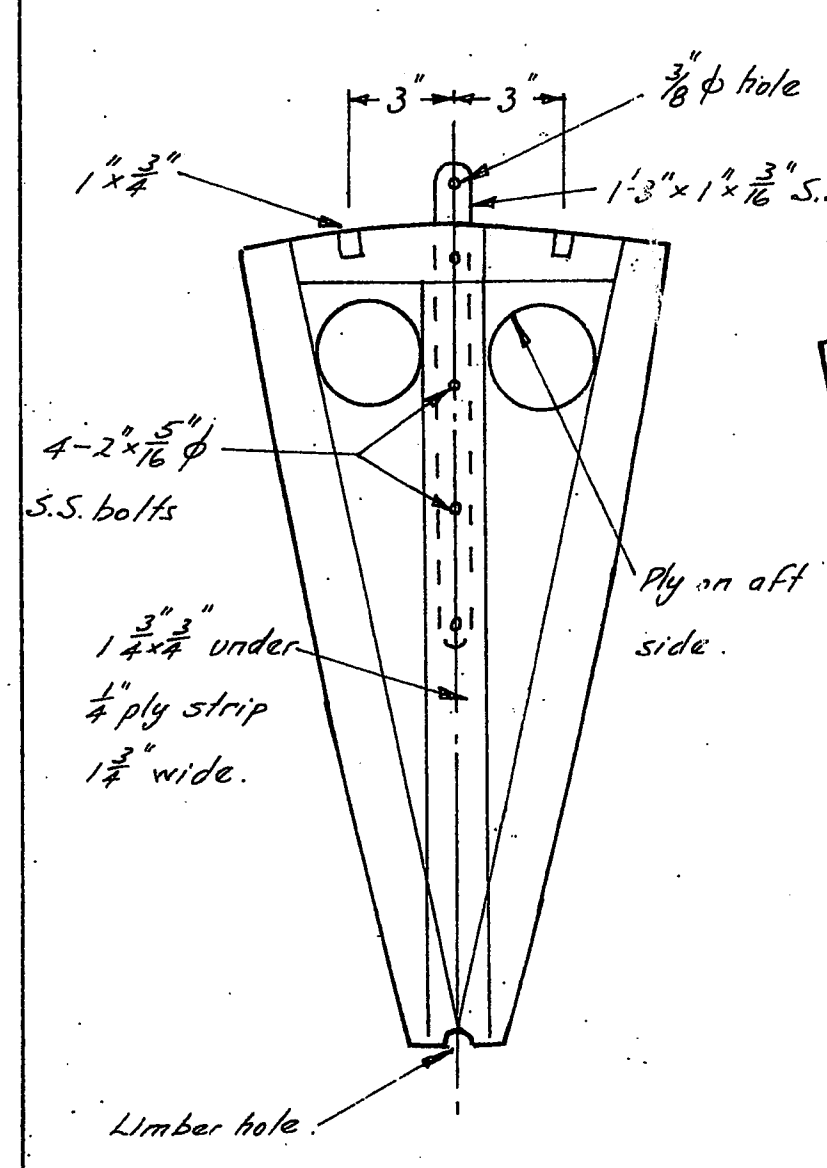


FRAME 1.
1-off 1/8" ply.

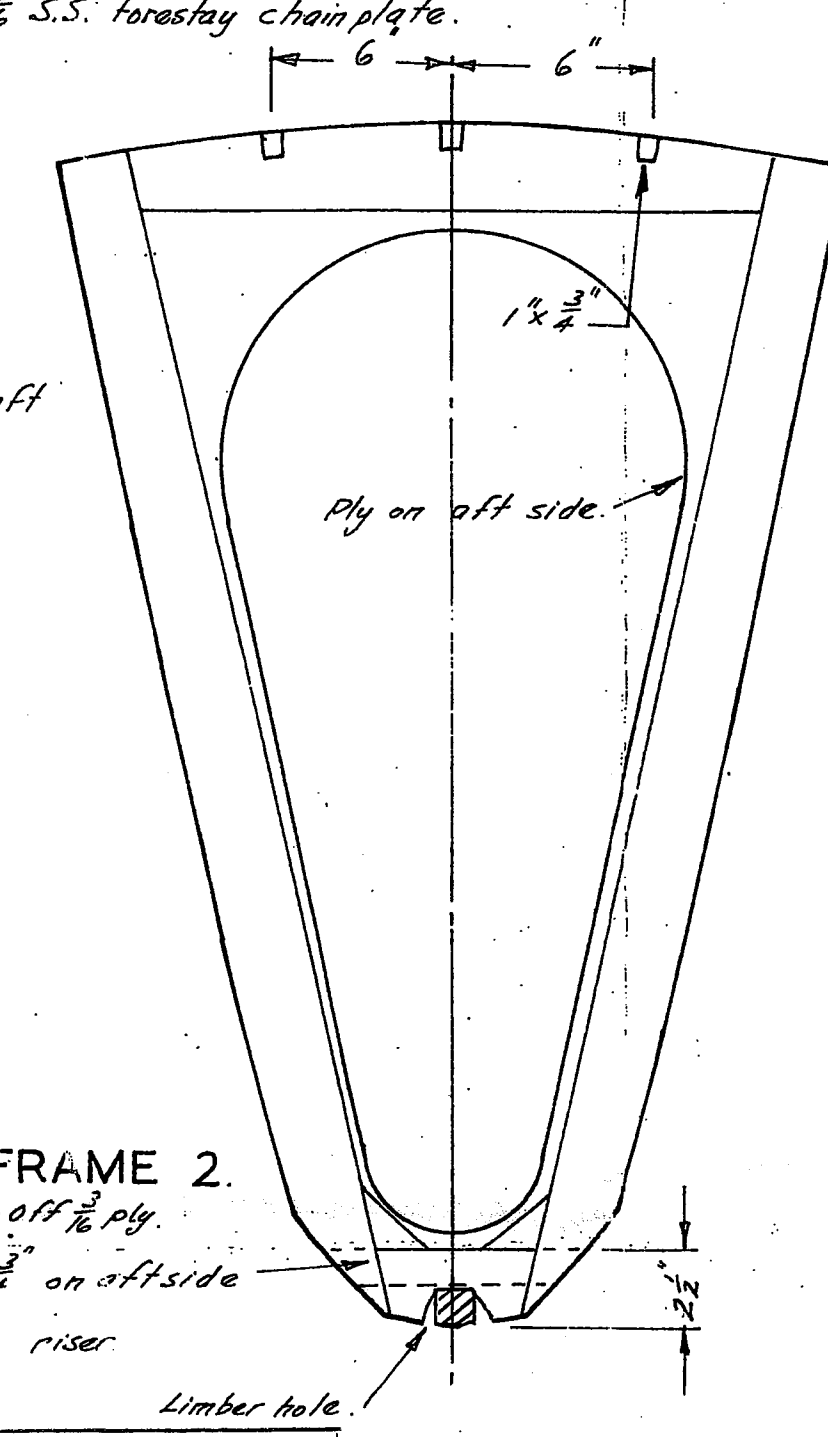


FRAME 2.
1-off 1/8" ply.
1 1/2" x 3/4" on aft side
bunk riser

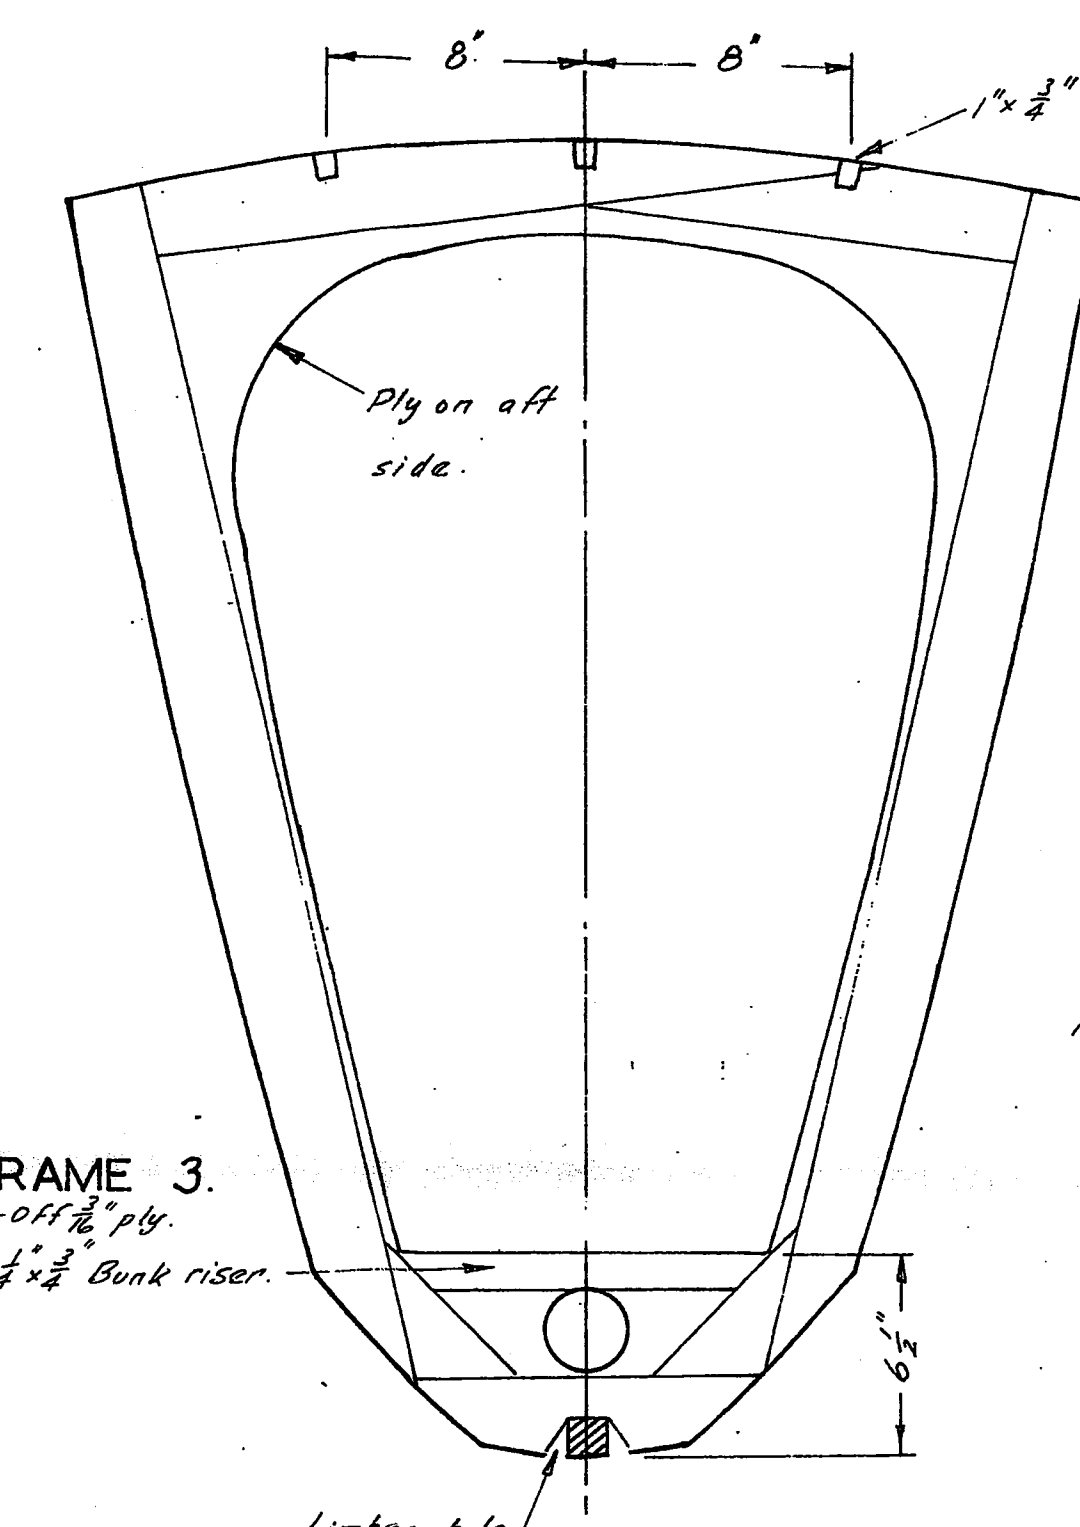


FRAME 3.
1-off 1/8" ply.
1 1/2" x 3/4" Bunk riser.

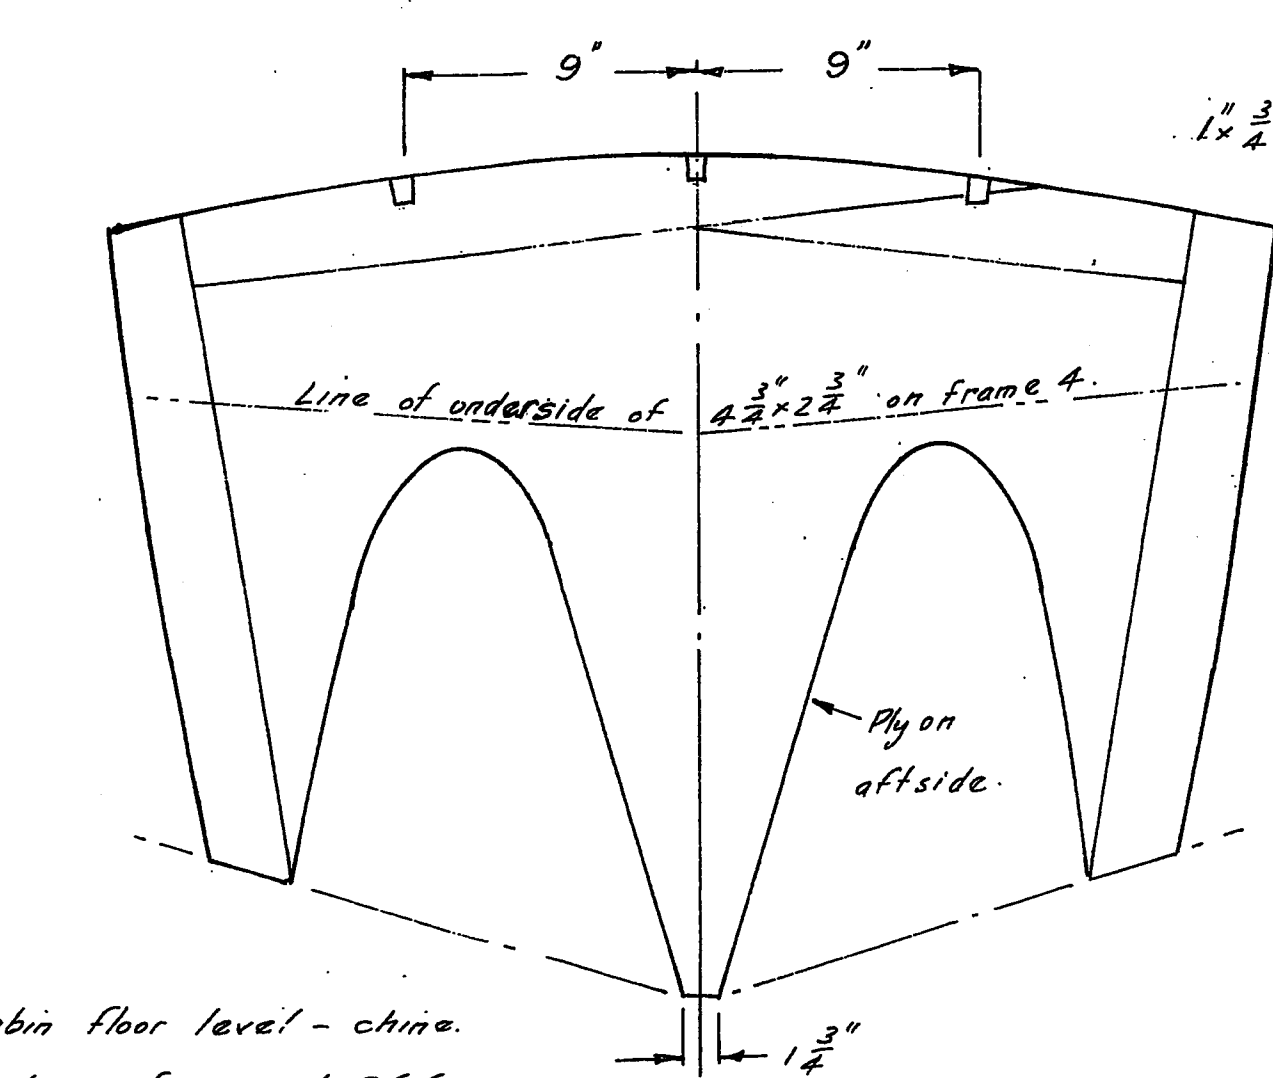


FRAME 4A.
1-off 1/4" ply.

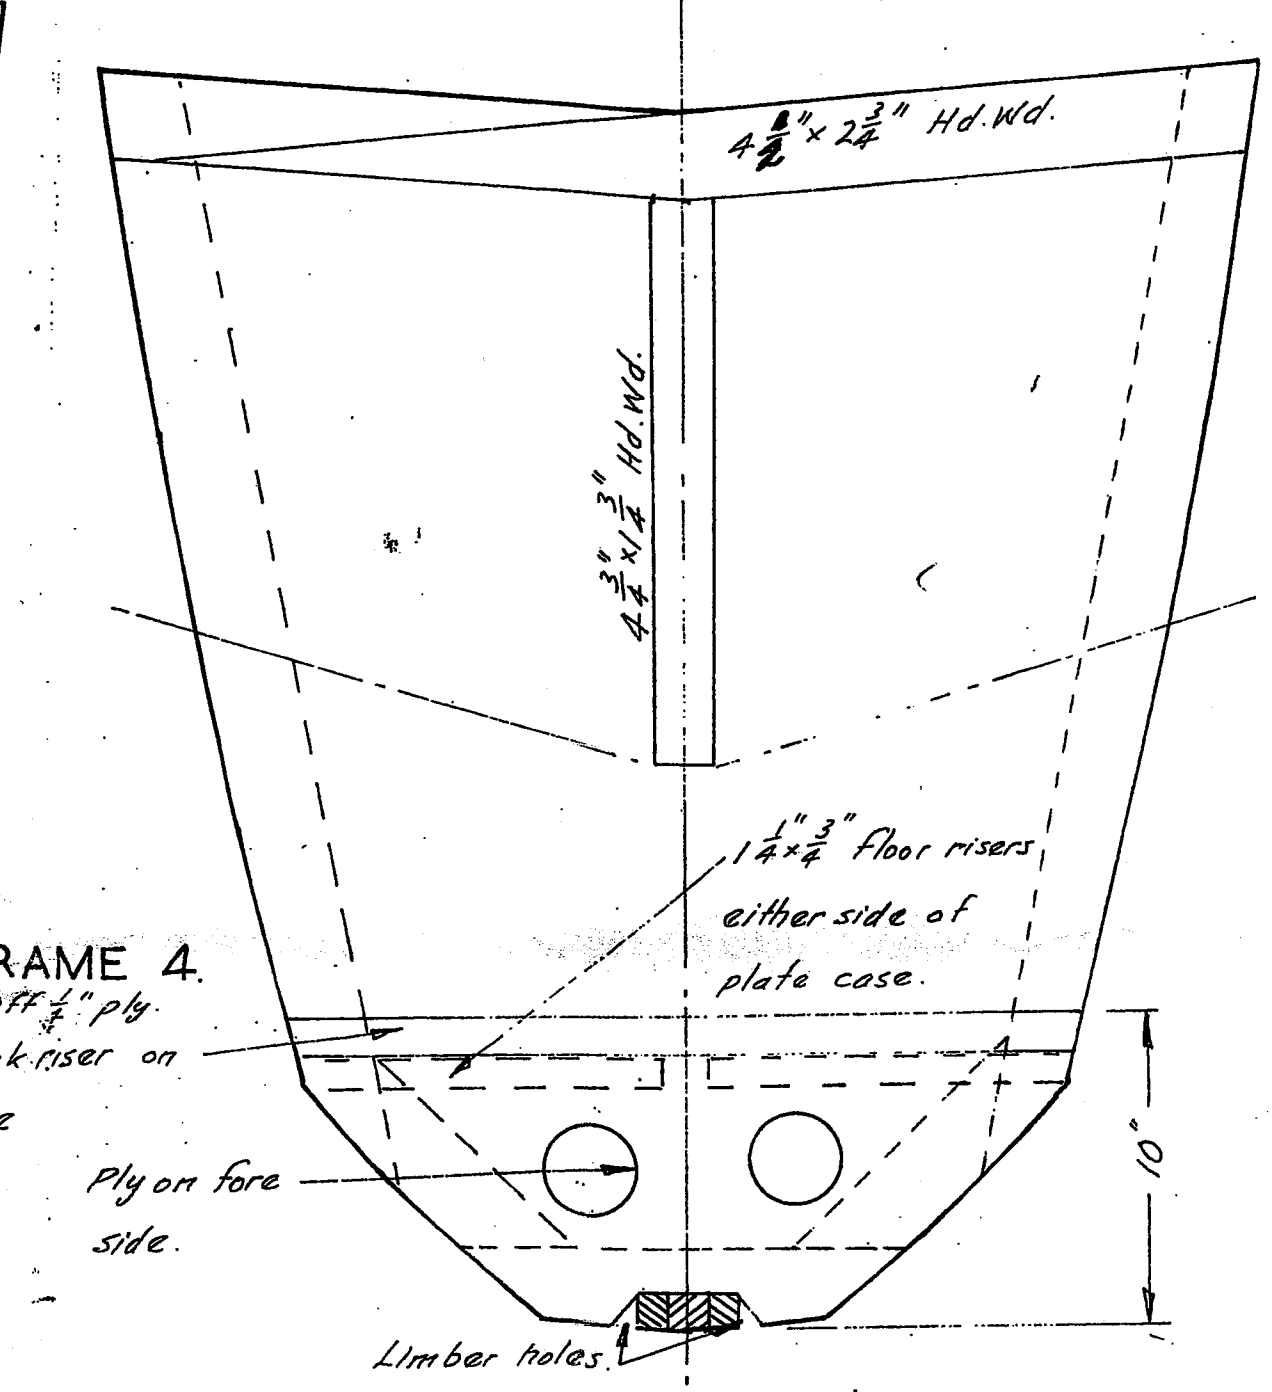


FRAME 4.
1-off 1/4" ply.
1 1/2" x 3/4" Bunk riser on
fore side

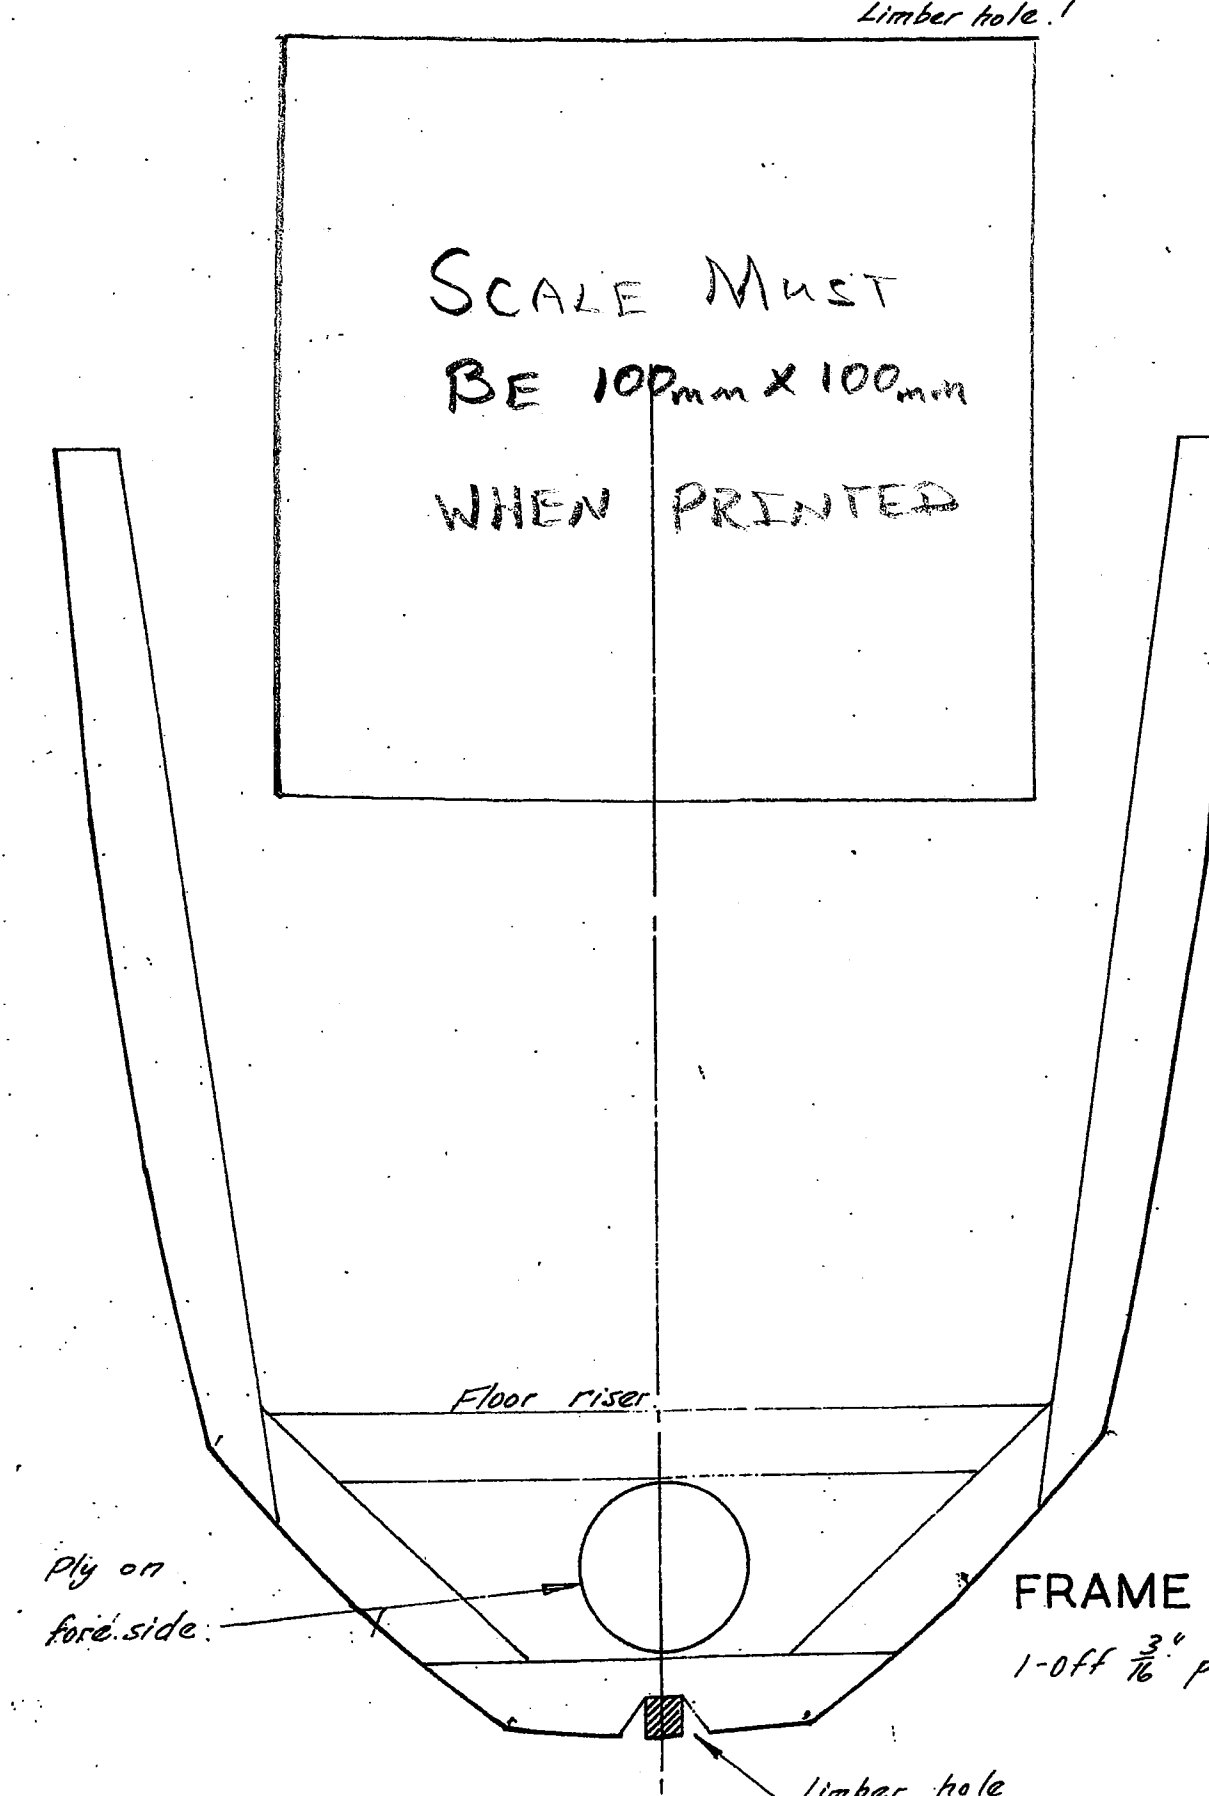


FRAME 5.
1-off 1/8" ply.

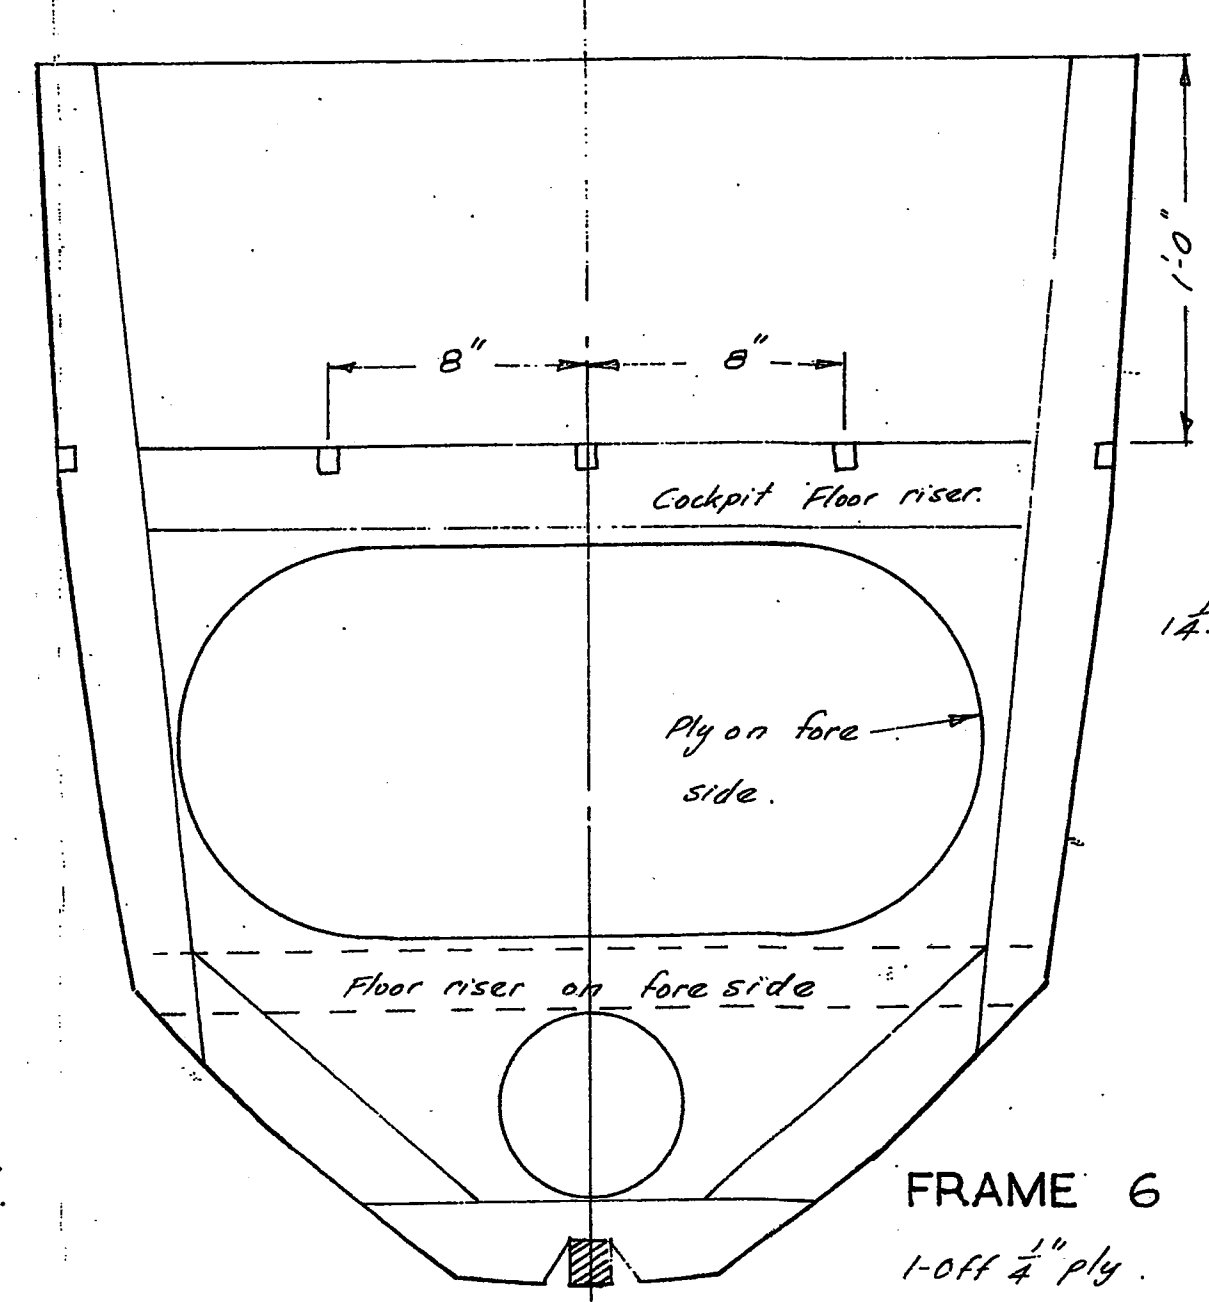


FRAME 6.
1-off 1/4" ply.

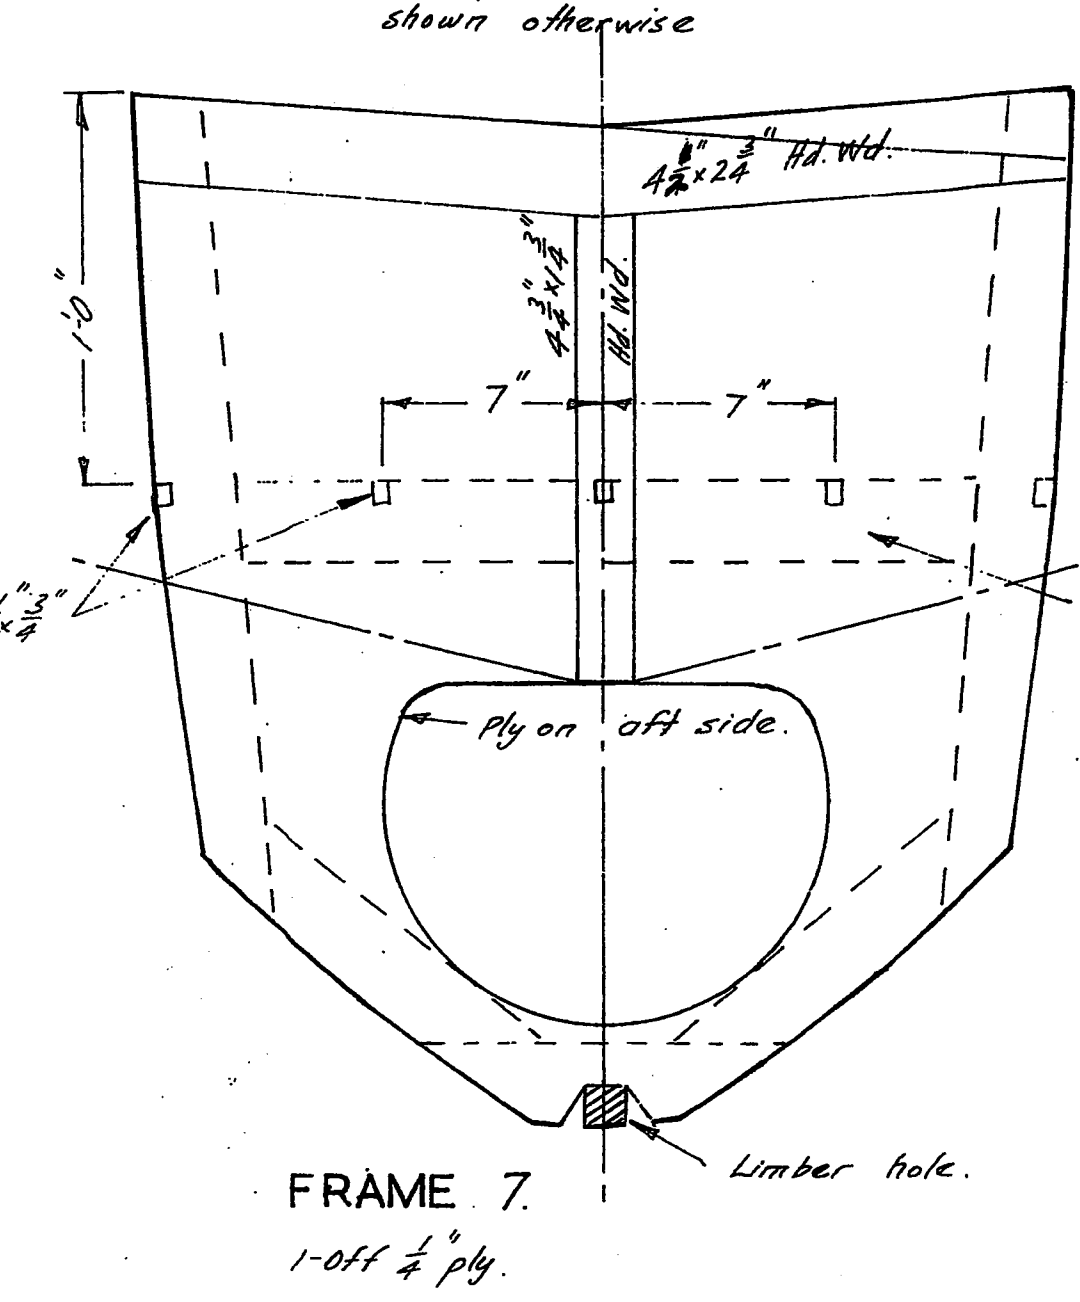

FRAME 7.
1-off 1/4" ply.

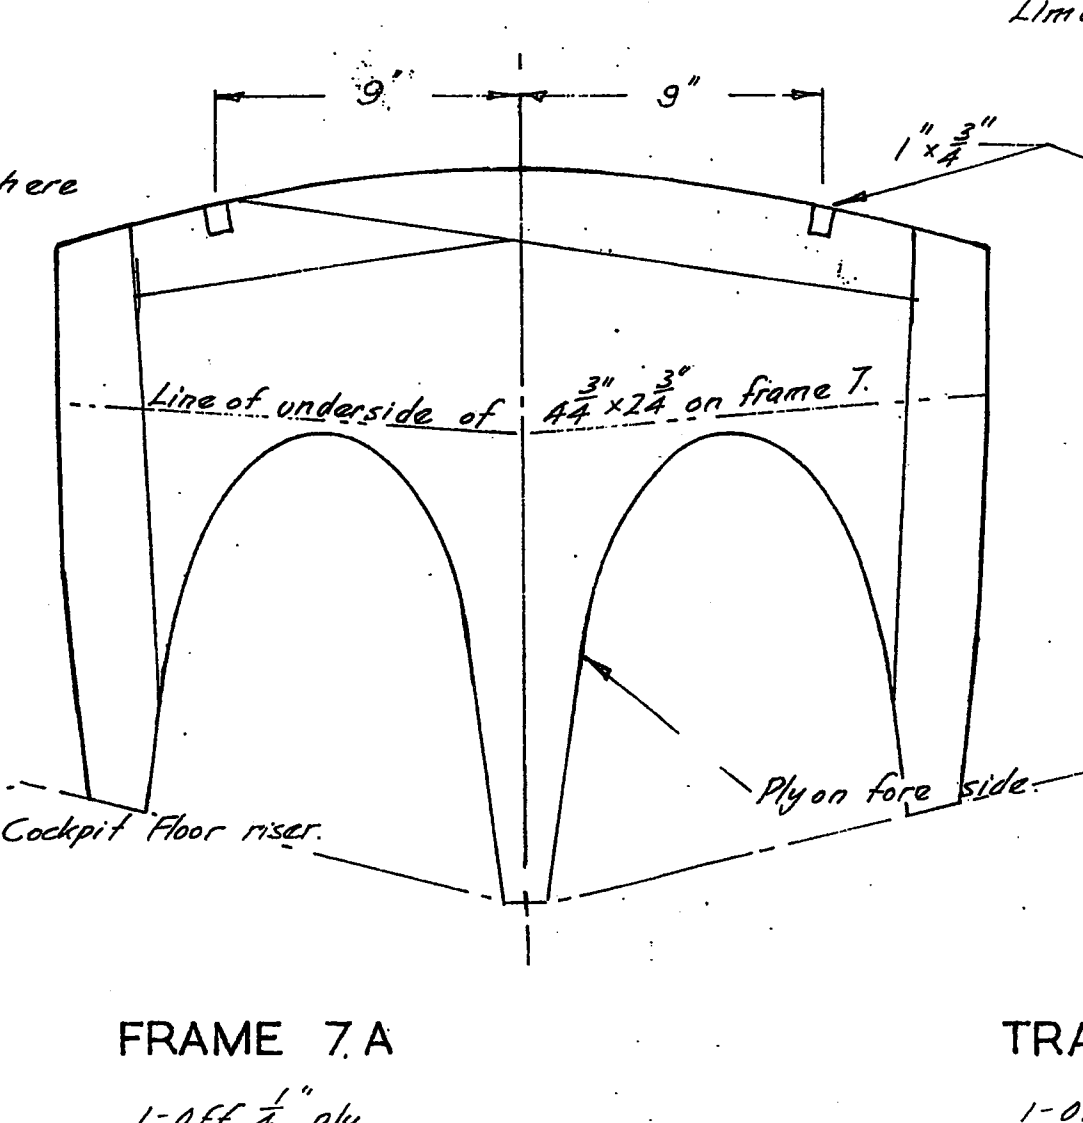

FRAME 7A.
1-off 1/4" ply.

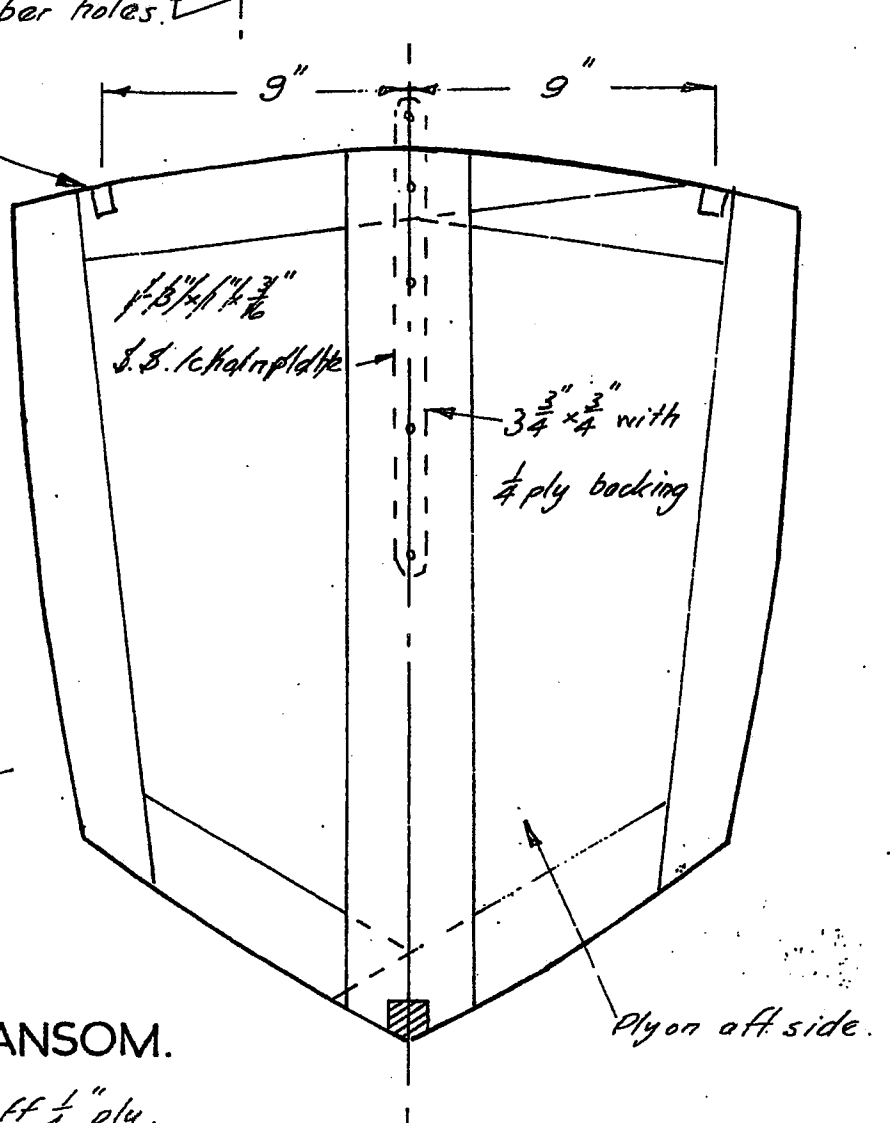

TRANSOM.
1-off 1/4" ply.

- Note: 1. Cabin floor level - chine level on frames 4, 5 & 6 - locate risers accordingly.
2. 1 1/2" x 3/4" to be added to hull sides between frames 6 & 7 to take cockpit floor after frames are inserted between hull sides.
3. Levels of frames 4A & 4 and 7A & 7 relative to each other are shown on sheet 1.
4. All frame edging 2 3/4" x 3/4" except where shown otherwise

SCALE MUST
BE 100mm x 100mm
WHEN PRINTED

BUCCANEER

Design by Lock Crowther.